

LANDMANN®

AUTUMN LEAVES CHIMINEA

Model 28253

ASSEMBLY INSTRUCTIONS



FOR SAFE OPERATION, PLEASE READ ALL ASSEMBLY AND OPERATING INSTRUCTIONS BEFORE USE.

REV. 3, 6/21/07



Model 28253

Congratulations on your purchase of the Autumn Leaves Chiminea! At Landmann USA, our goal is to provide products that are easy to assemble and fun to use. Should you have questions, issues, a defective part or if you have any questions concerning its use, please contact us at:

customerservice@landmann-usa.com

-OR-

1-800-321-3473 M-F 8-5 Eastern Time

Proof of purchase may be required.

Landmann USA
Cartersville, GA 30120
www.landmann-usa.com

Made in China
© 2007 Landmann USA



READ FIRST! RULES FOR SAFE OPERATION

- THIS CHIMINEA IS FOR OUTDOOR USE ONLY!
- USE ONLY ON BRICK, CONCRETE, STONE OR OTHER MASONRY SURFACES.
- KEEP THE FIRE REASONABLE. A LARGE FIRE CAN DAMAGE OR SHORTEN THE LIFE OF THE CAST IRON.
- DO NOT USE FIREWOOD OVER 12" LONG IN THIS CHIMINEA.
- DO NOT USE ON LAWNS OR WOODEN DECKS.
- KEEP THE CHIMINEA AWAY FROM BUILDINGS, FLAMMABLE ITEMS AND VEHICLES.
- THE CHIMINEA IS FOR ADULT USE ONLY.
- DO NOT MOVE THE CHIMINEA WHILE IT IS BEING USED.
- DO NOT LEAVE UNATTENDED AT ANY TIME WHILE IN USE.
- DO NOT USE IN WINDY CONDITIONS.
- DO NOT OVERLOAD OR USE TO BURN LEAVES OR GARBAGE.
- KEEP THE SPARK SCREEN IN PLACE WHILE USING.
- USE CAUTION WHEN REMOVING THE SPARK SCREEN, AS HOT STEAM OR A FLARE UP COULD CAUSE BURNS.
- BEFORE EACH USE, MAKE SURE THE CHIMINEA IS IN GOOD WORKING CONDITION.
- USE CAUTION AFTER THE FIRE HAS BEEN EXTINGUISHED- SURFACES WILL REMAIN HOT FOR SOME TIME.
- BE SURE ALL COALS ARE COLD BEFORE EMPTYING. IF NECESSARY POUR WATER ON COALS.


LANDMANN®

AUTUMN LEAVES CHIMINEA

Model 28253

Parts and Quantities:

PART	DESCRIPTION	QTY
A	LEGS	3
B	FIRE BOWL	1
C	TOP	1
D	FIRE BOWL AIR VENT	1
E	FRONT CONNECTOR / COOKING GRATE TAB	2
F	REAR CONNECTOR / COOKING GRATE TAB	2
G	SPARK SCREEN	1
H	COOKING GRATE	1
J	WOOD / CHARCOAL GRATES	2
K	LOWER CHIMNEY	1
L	DAMPER	1
M	CHIMNEY	1
N	CAP	1
O	WOOD HANDLE / POKER	2
P	M6 x 25 BOLT	9
Q	M6 x 20 BOLT	8
R	M6 x 15 BOLT	3
S	FLAT WASHER	17
T	M6 NUT	17
W	M5 x 22 BOLT	4
X	M5 NUT	4
Y	LOCK WASHER	17

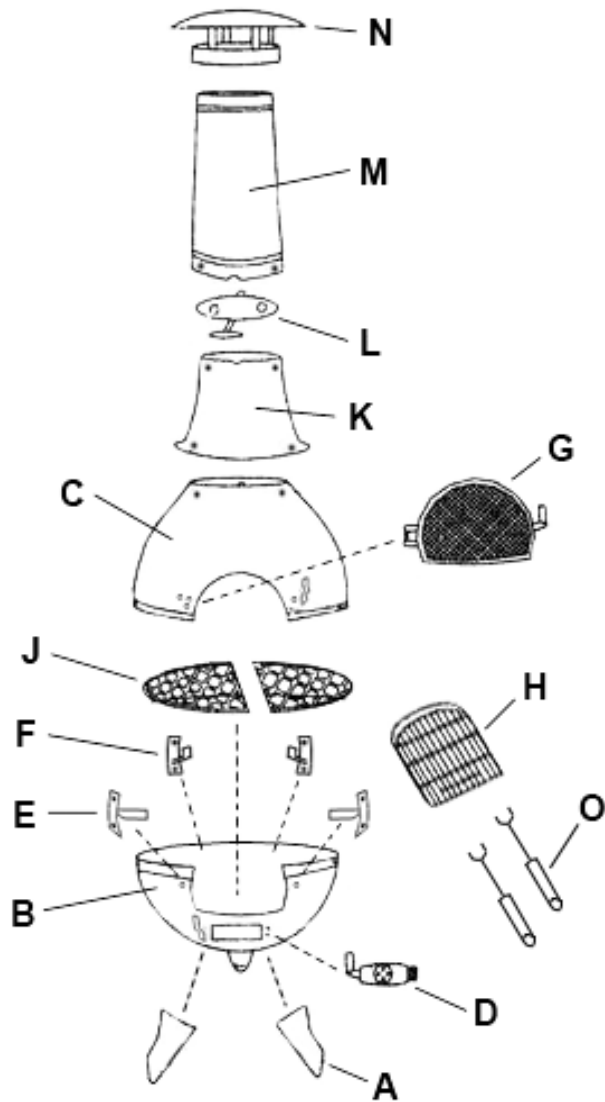

Assembly Instructions:

You will need these tools for assembly:
Medium phillips or flathead screw driver, pliers or small adjustable wrench.

- Step 1 Place fire bowl (B) on its side and attach the three legs (A) with six M6 x 25 bolts, flat washers, lock washers and M6 nuts. Tighten securely.
- Step 2 Attach the fire bowl air vent (D) to the fire bowl with two M5 x 22 bolts and M5 nuts.
- Step 3 Install the two front and rear connection plates (E, F) with four M6 x 20 bolts, flat washers, lock washers and M6 nuts.
- Step 4 Attach the top (C) to the fire bowl (B) by aligning with connector plates and use four M6 x 20 bolts, flat washers, lock washers and M6 nuts.
- Step 5 Attach lower chimney (K) to the top using three M6 x 25 bolts, flat washers, lock washers and M6 nuts.
- Step 6 Place damper (L) on the lower chimney. Attach the chimney (M) to the lower chimney using three M6 x 15 bolts.
- Step 7 Place the cap (N) on the chimney.
- Step 8 Assemble the spark screen (G) to the fire bowl using two M5 x 22 bolts and M5 nuts.
- Step 9 Place the two halves of the wood / charcoal grate (J) on the bottom of the fire bowl.
- Step 10 Place the cooking grate (H) onto the connector plates / cooking grate tabs.

Maintenance:

The Autumn Leaves Chiminea may be cleaned with water and mild detergent. Periodic maintenance is required to return painted cast iron surfaces to original appearance. Remove any rust with sandpaper or steel brush. Repaint with grill paint for high temperature surfaces. Follow paint manufacturer's instructions.

**If you have any questions or need assistance, please contact us at:
1-800-321-3473 or at
customerservice@landmann-usa.com**