

LANDMANN®

PAWN CHIMINEA

Model 28254

ASSEMBLY INSTRUCTIONS



FOR SAFE OPERATION, PLEASE READ ALL ASSEMBLY AND OPERATING INSTRUCTIONS BEFORE USE.

REV. 1, 6/14/07



Model 28254

Congratulations on your purchase of the Pawn Chiminea! At Landmann USA, our goal is to provide products that are easy to assemble and fun to use. Should you have questions, issues, a defective part or if you have any questions concerning its use, please contact us at:

customerservice@landmann-usa.com

-OR-

1-800-321-3473 M-F 8-5 Eastern Time

Proof of purchase may be required.

Landmann USA
Cartersville, GA 30120
www.landmann-usa.com

Made in China
© 2007 Landmann USA



READ FIRST! RULES FOR SAFE OPERATION

- THIS CHIMINEA IS FOR OUTDOOR USE ONLY!
- USE ONLY ON BRICK, CONCRETE, STONE OR OTHER MASONRY SURFACES.
- KEEP THE FIRE REASONABLE. A LARGE FIRE CAN DAMAGE OR SHORTEN THE LIFE OF THE CAST IRON.
- DO NOT USE FIREWOOD OVER 9" LONG IN THIS CHIMINEA.
- DO NOT USE ON LAWNS OR WOODEN DECKS.
- KEEP THE CHIMINEA AWAY FROM BUILDINGS, FLAMMABLE ITEMS AND VEHICLES.
- THE CHIMINEA IS FOR ADULT USE ONLY.
- DO NOT MOVE THE CHIMINEA WHILE IT IS BEING USED.
- DO NOT LEAVE UNATTENDED AT ANY TIME WHILE IN USE.
- DO NOT USE IN WINDY CONDITIONS.
- DO NOT OVERLOAD OR USE TO BURN LEAVES OR GARBAGE.
- KEEP THE SPARK SCREEN IN PLACE WHILE USING.
- USE CAUTION WHEN REMOVING THE SPARK SCREEN, AS HOT STEAM OR A FLARE UP COULD CAUSE BURNS.
- BEFORE EACH USE, MAKE SURE THE CHIMINEA IS IN GOOD WORKING CONDITION.
- USE CAUTION AFTER THE FIRE HAS BEEN EXTINGUISHED- SURFACES WILL REMAIN HOT FOR SOME TIME.
- BE SURE ALL COALS ARE COLD BEFORE EMPTYING. IF NECESSARY POUR WATER ON COALS.


LANDMANN®

PAWN CHIMINEA

Model 28254

Parts and Quantities:

PART	DESCRIPTION	QTY
A	CAP	1
B	SPARK ARRESTOR	1
C	CHIMNEY	1
D	POKER HANGER	1
E	POKER	1
F	TOP	1
G	CONNECTOR PLATES	3
H	FIRE BOWL	1
J	GRATE	1
K	SPARK SCREEN	1
L	LEGS	3
M	DOOR HOOK	1
N	M6 x 20 BOLT	10
O	M6 x 28 BOLT	6
P	LOCK WASHER	16
Q	WASHER	16
R	M6 NUT	17

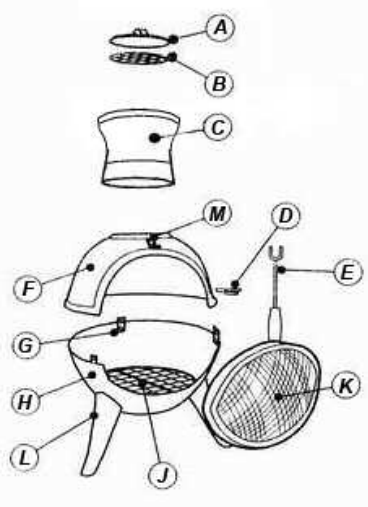









Assembly Instructions:

You will need these tools for assembly:
Medium phillips or flathead screw driver, pliers or small adjustable wrench.

- Step 1 Place fire bowl (H) on its side and attach the three legs (L) with six M6 x 28 bolts, lock washers and nuts. Tighten bolts securely.
- Step 2 Attach three connector plates (G) to the fire bowl bottom with three M6 x 20 bolts, lock washers and nuts.
- Step 3 Attach the top (F) to the fire bowl and connector plates with three M6 x 20 bolts, lock washers and nuts.
- Step 4 Attach poker hanger (D) on the right side of the top using a lock washer and nut.
- Step 5 Assemble chimney (C) to the top using three M6 x 20 bolts, lock washers and nuts.
- Step 6 Insert grate (J) inside the fire bowl.
- Step 7 Place the spark arrestor (B) and cap (A) on the chimney.
- Step 8 Attach the door hook (M) using one M6 x 20 bolt, lock washer and nut. Place the spark screen (K) on the hook.
- Step 9 Make sure all bolts are securely tightened.
- Step 10 Enjoy!

Maintenance:

The Pawn Chiminea may be cleaned with water and mild detergent. Periodic maintenance is required to return painted cast iron surfaces to original appearance. Remove any rust with sandpaper or steel brush. Repaint with grill paint for high temperature surfaces. Follow paint manufacturer's instructions.

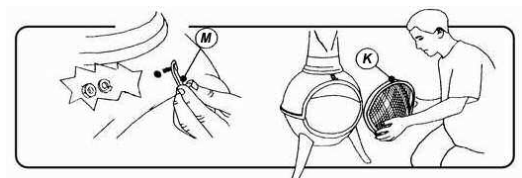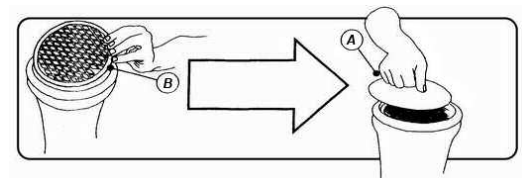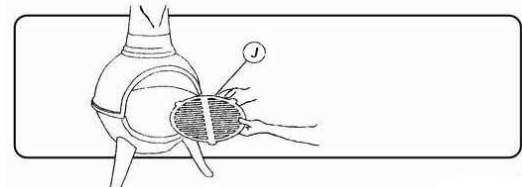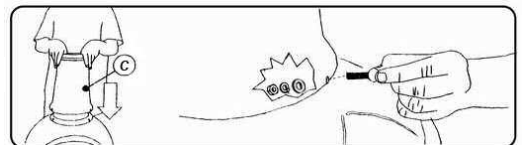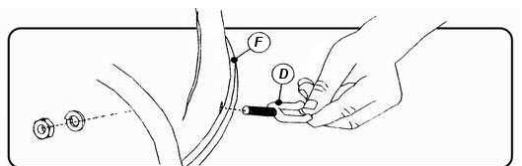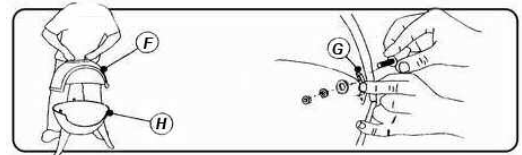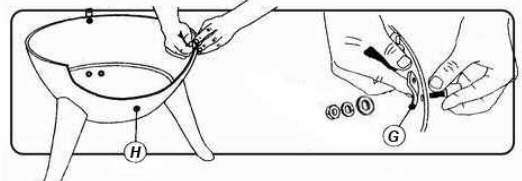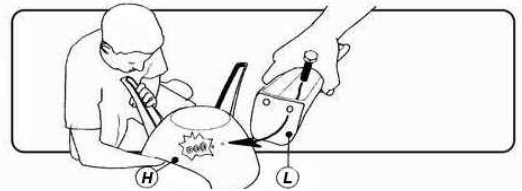

**If you have any questions or need assistance, please contact us at:
1-800-321-3473 or at
customerservice@landmann-usa.com**